


Monteringsanvisning / Assembly Instructions / Aufbauanleitung

Tools needed for assembling. Not included.


Werkzeuge für die Montage sind nicht Teil des Lieferumfanges.

Verktyg som behövs för montering. Ingår inte.

Tipplåda för klipp-/strykbord **Dump Box For Cutting-/Ironing Table** **Kipplade Für Zuschneide-/Bügeltisch**



Pozidrive PZ2 / PZ3



13 / 17mm

Träklubba
Wooden Mallet
Holzhammer

(x14)



(x14)



8x40 (x10)



M6 (x2)



M10x70 (x2)



M8x70 (x1)



M8x50 (x1)



M6x40 (x2)



M4x25 (x2)



M10 (x2)



M8 (x2)

Låsmutter
Locknut
Kontermutter

M8 (x2)




11x28(x6)




9x22 (x5)





(x2)





(x1)

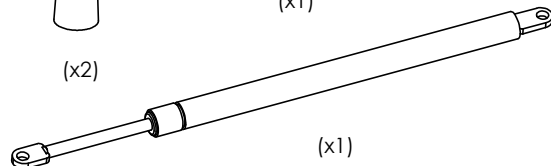



(x1)

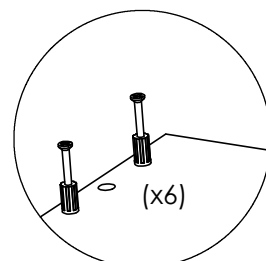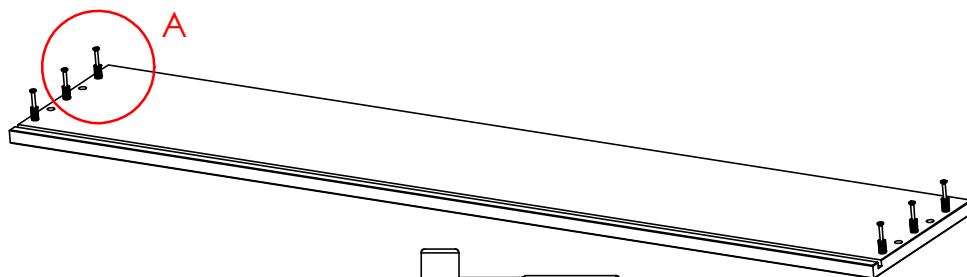



DETAIL A

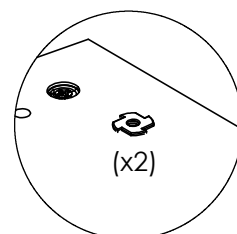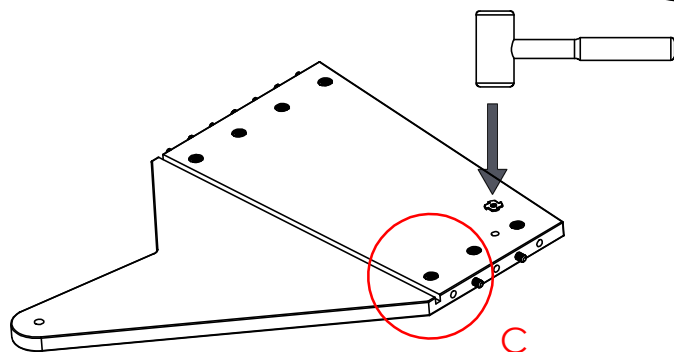


DETAIL B

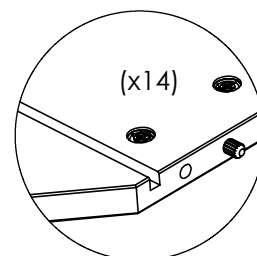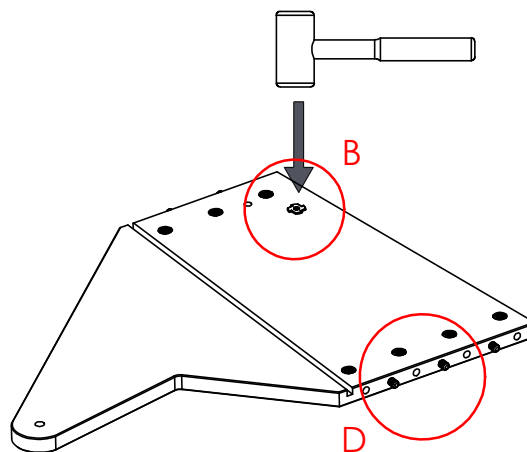



DETAIL C

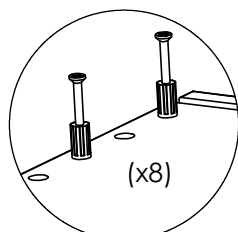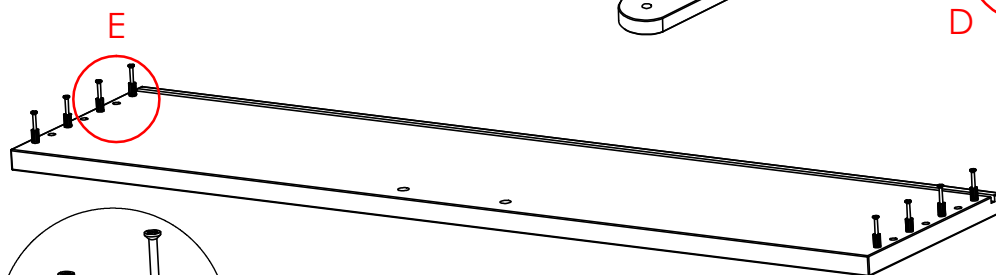


DETAIL E

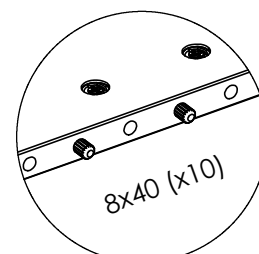


DETAIL D

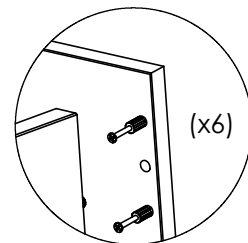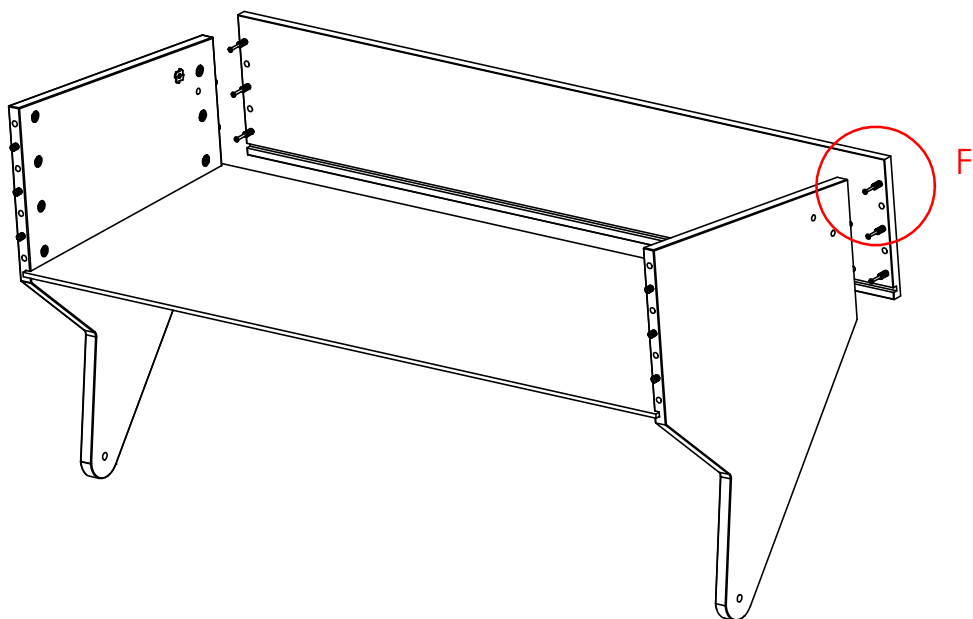

DETAIL F

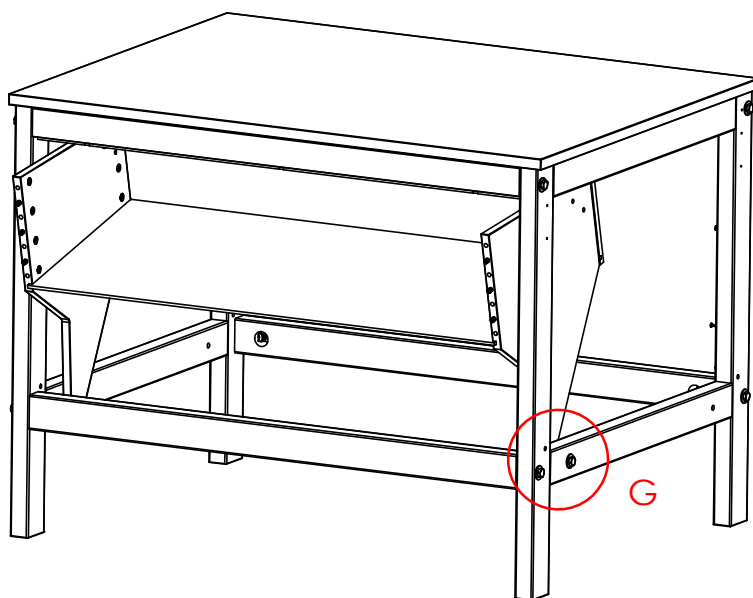


M10x70 (x2)
M10 (x2)
11x28 (x6)

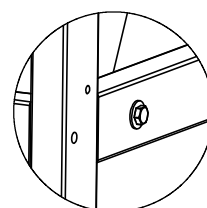



DETAIL G

M10x70 - 11x28 11x28 - M10 - 11x28



11x28 - M10 - 11x28 11x28 - M10x70

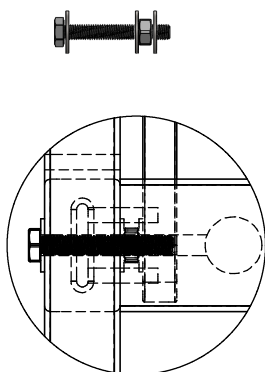


DETAIL G

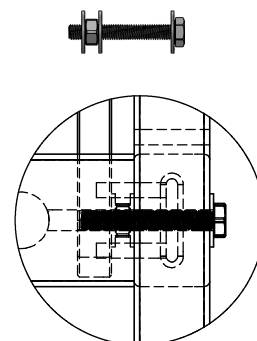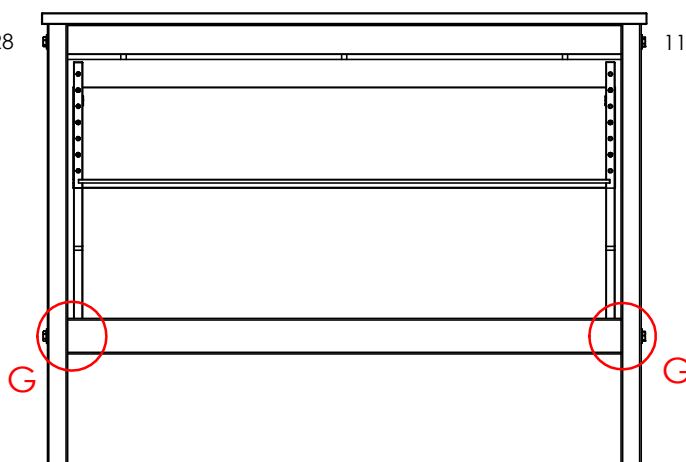


DETAIL G

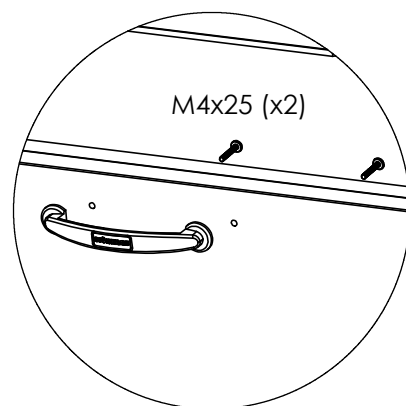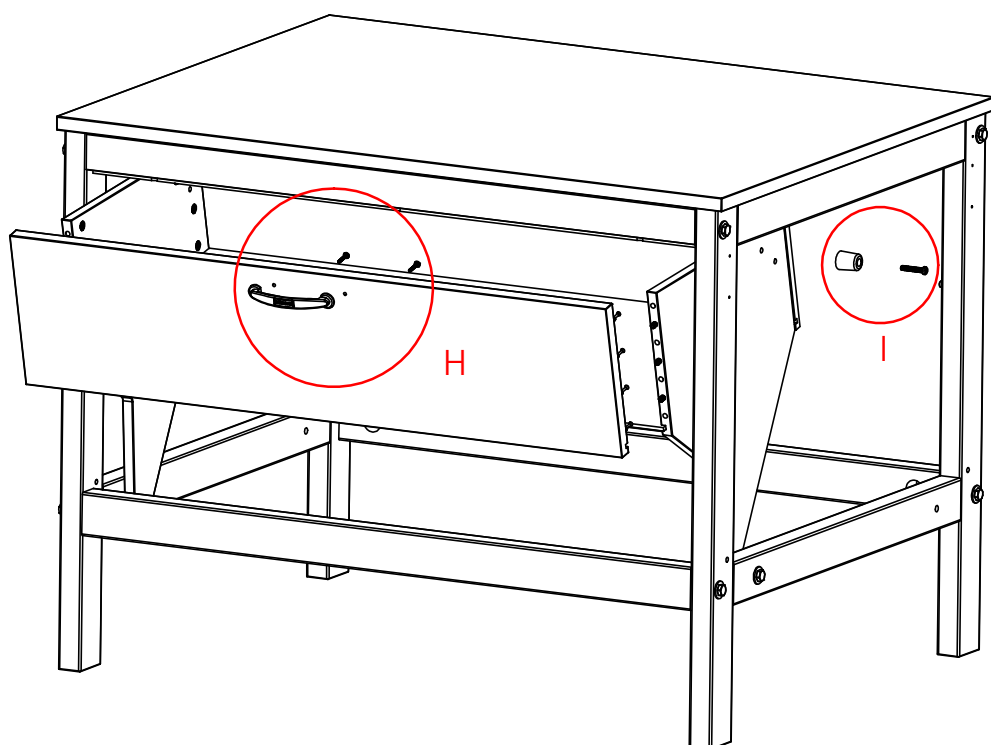


DETAIL H

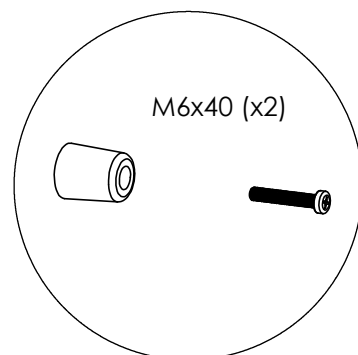

DETAIL I

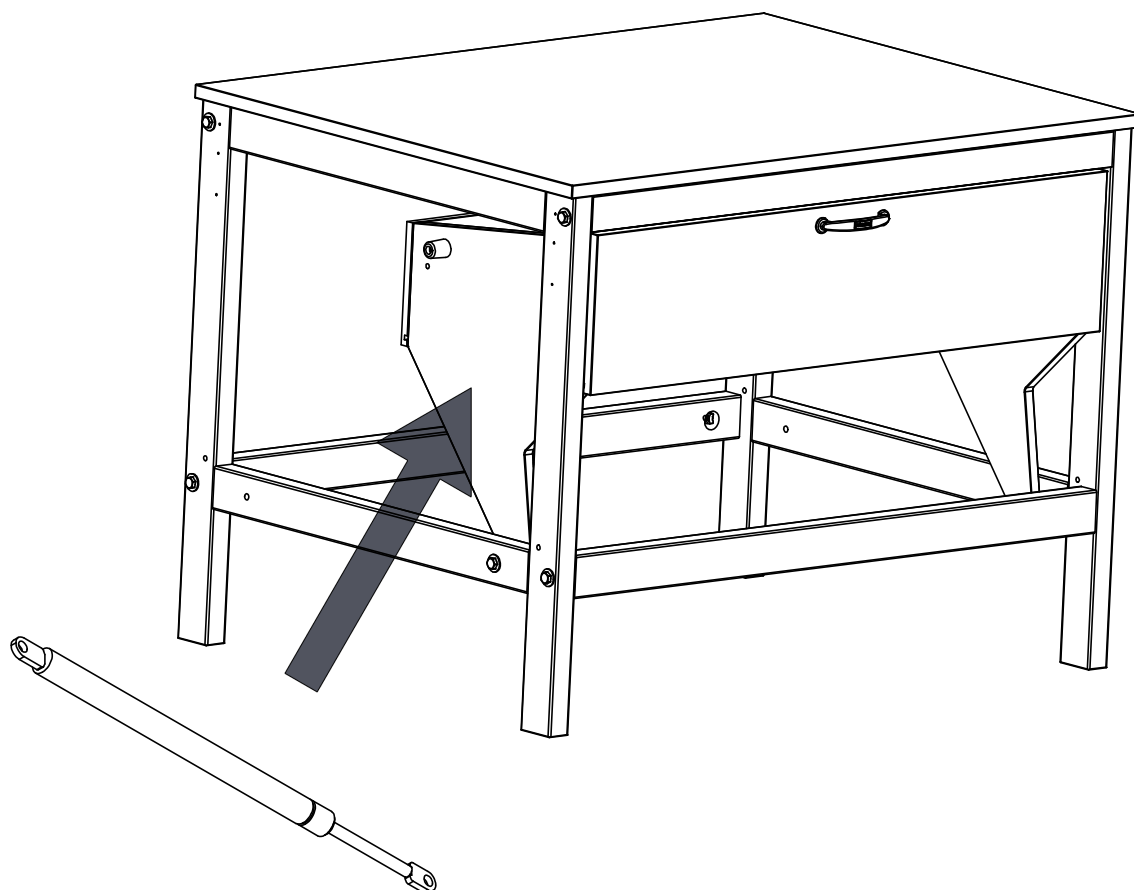


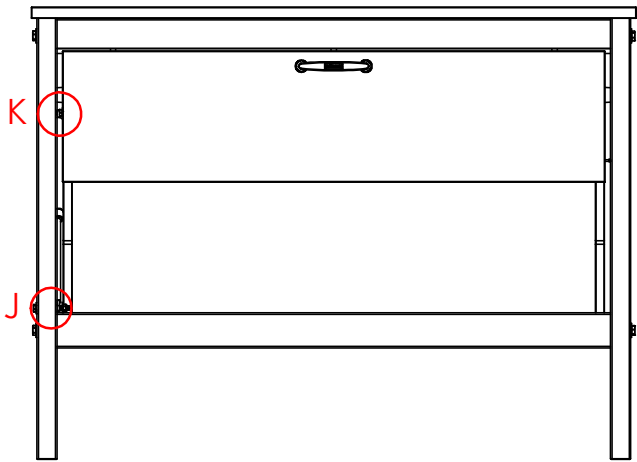

M8x70 - 9x22

M8

9x22 - M8 Lås
Lock
Konter

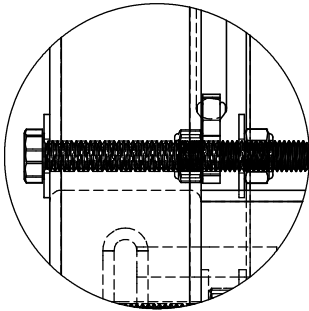


DETAIL J


M8 Lås - 9x22
Lock
Konter -

M8 - 9x22

9x22 - M8x50

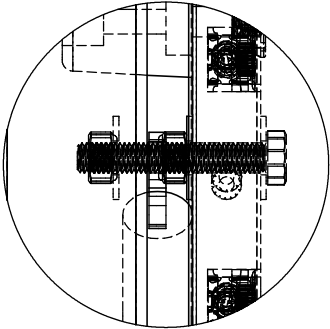

DETAIL K

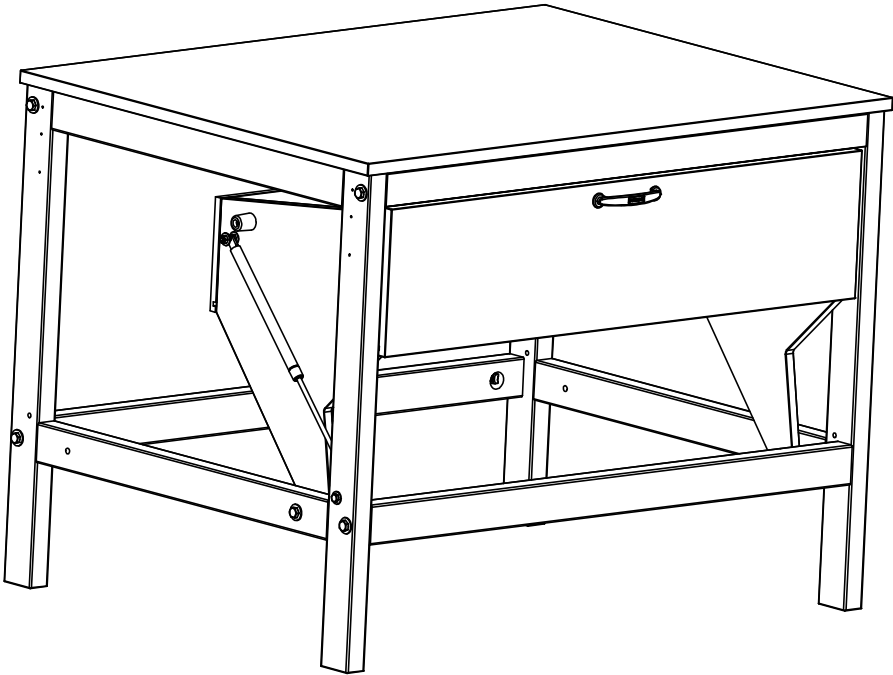

SJÖBERGS WORKBENCHES AB
SE-576 95 Stockaryd Sweden
Tel +46 (0)382-25700
office@sjobergs.se sjobergs.se

