




Monteringsanvisning / Assembly Instructions / Aufbauanleitung

Verkt yg som beh vs f r montering. Ing r inte.

Tools needed for assembling. Not included.





Werkzeuge f r die Montage sind nicht Teil des Lieferumfanges.


Tr underrede -Trestle Wood-Holzgestell

Om Art. 33160 L s Framt ng ska monteras p  b nken ska det ske innan monteringslisten skruvas fast i b nkskivan.

If Art. 33160 VISE should be assembled on the bench, it should be done before the strip is screwed into the bench top.

Soll an der Arbeitsplatte auch die Vorderzange 33160 montiert werden, muss dies vor dem Anschrauben der Montageleisten geschehen.

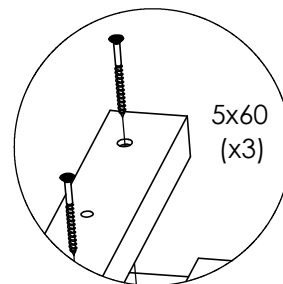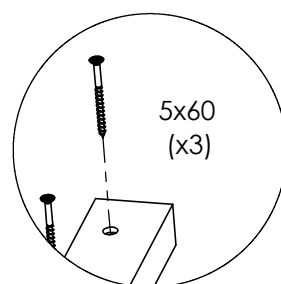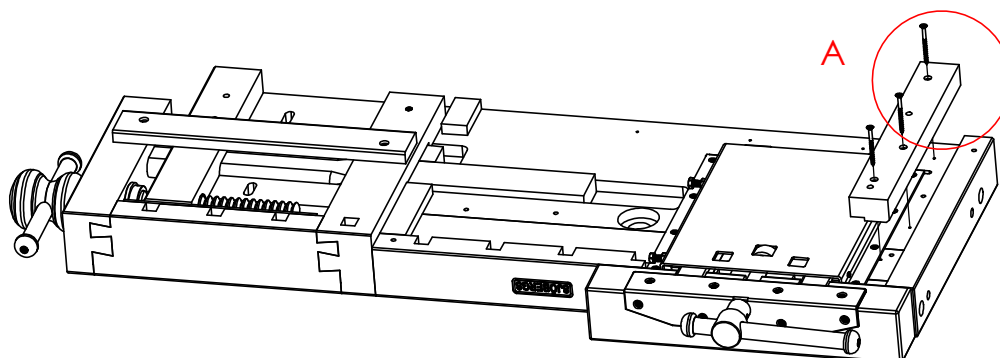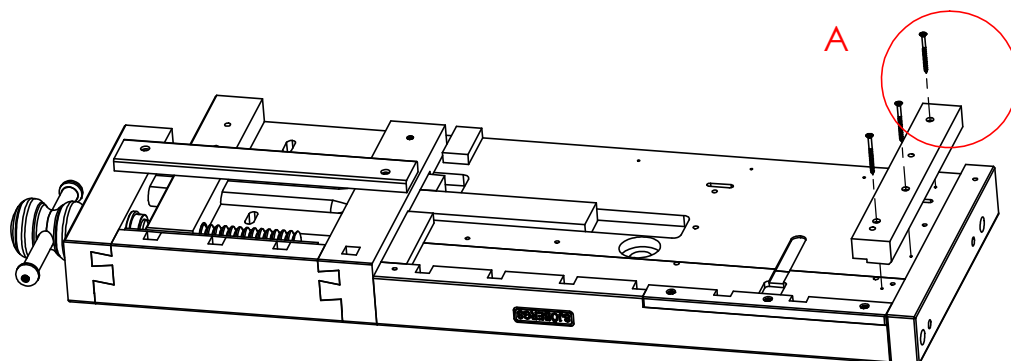**DETAIL A****DETAIL A**

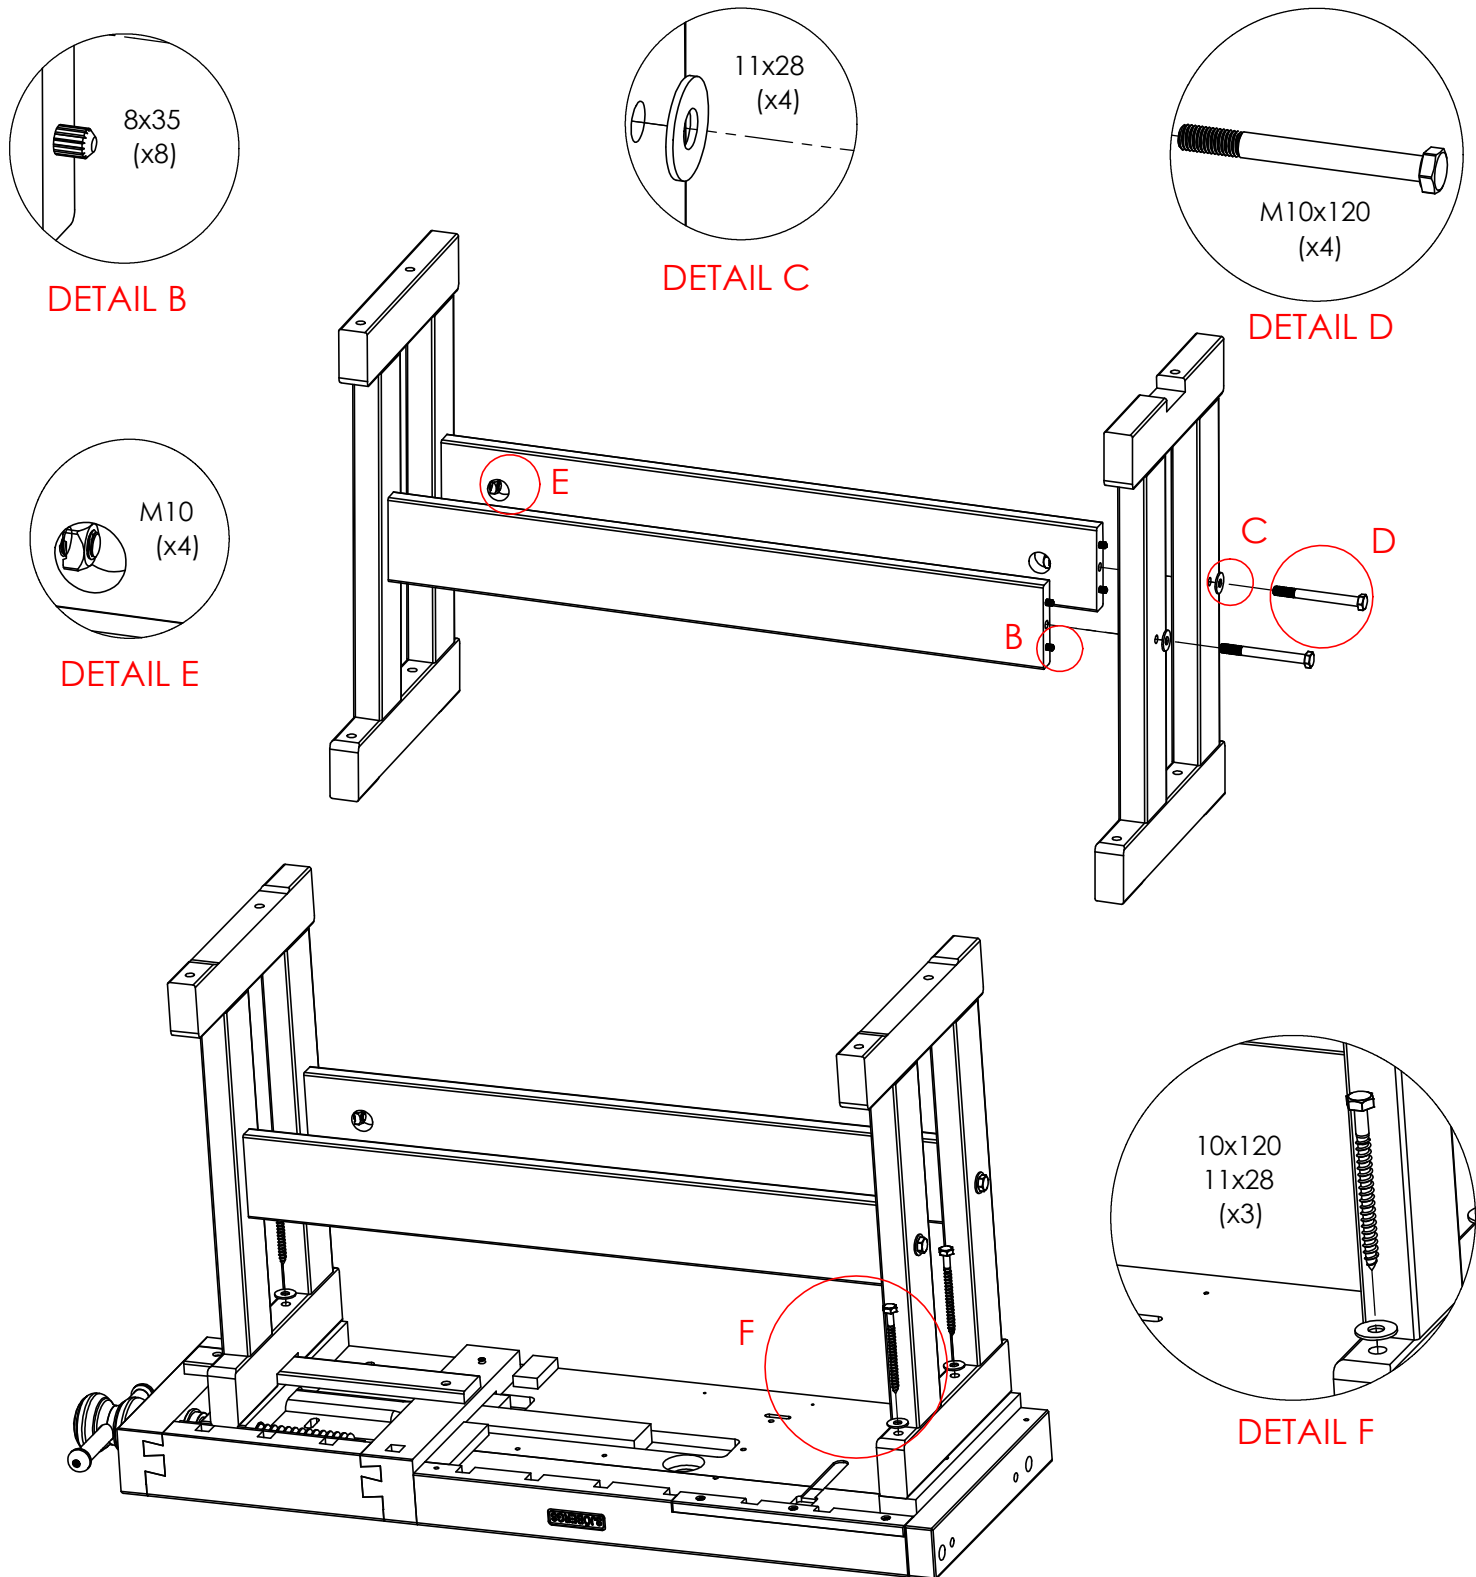

Stativet måste skruvas fast i golvet (Skravar ingår ej).

The trestle should be fastened to the floor (Fixing bolts not supplied).

Das Gestell muss zwingend auf dem Fussboden befestigt werden.

(Fixierschrauben für diesen zweck sind allerdings nicht Teil des Lieferumfanges).